



How to Vacuum Your Pool

Things you will need:

- Telescopic pole
- Vacuum head
- Vacuum hose
- Skim vac (optional)

1. Attach the vacuum head to the pole.
2. Take one end of the vacuum hose & attach it to the top of the vacuum head.
3. Place vacuum head, hose, and pole into the pool so that it rests on the pool floor.
4. At this time, depending on the condition of your pool, you'll choose which filter setting to vacuum on. If you're confused on the filter settings and what they mean, refer back to our "Sand Filter Settings & What They Mean" sheet.
5. Place the other end of the vacuum hose in front of the return jet so that water goes into the vacuum hose, pushing all the air out of the hose. Bubbles will begin to come out of the vacuum head, once the bubbles stop, the vacuum hose is free of air.
6. Remove the skimmer lid and skimmer basket, block the end of the hose that you filled with water with the palm of your hand to keep the water inside the hose and bring it to the skimmer, insert this end of the hose inside the suction hole at the bottom of the skimmer.

You should always vacuum your pool on the "waste" setting when vacuuming algae, sand, leaves or anything else you don't want to return to your pool or become trapped in your filter

We recommend you researching videos online of people vacuuming pools, sometimes it's easier to watch someone else vacuum a pool rather than reading about it

If you have any questions or concerns, call us at either of our locations:

Madisonville: (270)825-8513

Owensboro: (270) 215-1565